

DISC BRAKES PROFILE GAUGE

IKD Series

User's manual

22, Logoisky tract, Minsk
220090, Republic of Belarus
tel/fax: +375 17 281 35 13
info@riftek.com
www.riftek.com

Contents

1.	Safety precautions and measurement conditions	3
2.	Electromagnetic compatibility	3
3.	Laser safety	3
4.	General information	3
4.1.	Parameters under control	4
5.	Basic data and performance characteristics	4
6.	Complete set to be supplied	4
7.	Structure and operation principle	4
7.1.	Basic components of the device and their functions	4
7.1.1.	Laser scanning module	5
7.1.2.	PDA	6
7.2.	Operation principle	7
8.	Measurement procedure	7
8.1.	Activation	7
8.2.	Measurement	8
9.	Wheel parameters under control. Terms and definitions	9
10.	PDA program setting	9
10.1.	Selection of measurement units	9
10.2.	Data and Time settings	10
10.3.	Database selection	10
10.4.	New laser module connection	11
10.5.	Selection and changing of language and terminology	12
10.6.	Browsing and updating PDA software	12
11.	Working with the profilometer	12
11.1.	Activation	12
11.2.	On-line measurements	12
11.3.	Measurements with database maintenance	13
11.4.	Browsing the database	14
11.5.	Saving database on flash memory card	14
11.6.	Deactivation	15
12.	Database support software	15
13.	Installation of Bluetooth connection between scanning module and PC	15
14.	Testing and calibration	17
14.1.	Preparation for testing/calibration	17
14.2.	Calibration	20
15.	Figure 1A Charging of built-in accumulator battery	20
16.	Warranty policy	20
17.	Distributors	21
18.	Annex 1. RIFTEK measurement instrument for railway transport	23

1. Safety precautions and measurement conditions

- Prior to mounting the profilometer onto the wheel, areas of contact of the side supports with the wheel surface should be thoroughly cleaned from dirt.
- When mounting the module on the wheel, do not allow heavy shocks of its support against the wheel.
- The output windows of the profilometer and profilometer supports must be carefully inspected and cleaned
- Do not use laser module in locations close to powerful light sources.

2. Electromagnetic compatibility

The profilometer have been developed for use in industry and meet the requirements of the following standards:

- EN 55022:2006 Information Technology Equipment. Radio disturbance characteristics. Limits and methods of measurement.
- EN 61000-6-2:2005 Electromagnetic compatibility (EMC). Generic standards. Immunity for industrial environments.
- EN 61326-1:2006 Electrical Equipment for Measurement, Control, and Laboratory Use. EMC Requirements. General requirements.

3. Laser safety

The profilometer make use of an c.w. 660 nm wavelength semiconductor laser. Maximum output power is 1 mW. The device belongs to the 2 laser safety class. The following warning label is placed on the profilometer body:



The following safety measures should be taken while operating the profilometer:

- Do not target laser beam to humans;
- Do not disassemble the sensor;
- Avoid staring into the laser beam.

4. General information

Laser disc brakes profilometer IKD Series is designed for disc brakes profile measuring.

The main functions of IKD are:

- obtaining the information on the profile parameters of the working disc brakes surface;
- full profile scanning and analyze of the disc brakes acting face;
- visualization of the combined graphical images of actual and new disc brakes profiles on the display of system unit;

4.1. Parameters under control

- Maximum wear of brake disk (Wmax)
- Minimum wear of brake disk (Wmin)

5. Basic data and performance characteristics

Name of parameter	Value
Disc brakes wear,mm	-5,0 ...+5,0
Measurement range, mm	160
Inaccuracy, not more than, mm	±0,01
Scanning time, sec	6
Digital readout device dimensions (PDA), mm	see Fig.5
Dimensions of laser scanning, mm	see Fig.3
Power supply, laser module	4,8V, 8 rechargeable batteries, type AA, 1,2V
Power supply, PDA	3,7V Lithium-polymer batteries, 3300mAh
The number of measurements that can be taken before battery recharge is not less than	500
PDA memory capacity, no less	100 000 measurements
Interface between laser module and PDA	Bluetooth

6. Complete set to be supplied

Designation	Name	Quantity	Weight kg
RF303	PDA	1	0,4
RF506	Laser scanning module	1	1,8
RF506.40	Charging device 5V 3.0A for PDA	1	0,2
RF506.41	Charging device 9V 3.0A for laser module	1	0,2
RF506.42	Universal cable (USB-port + PDA charge)	1	
RF506.43	Bluetooth/USB - adapter	1	
RF506.30	Packing case	1	1,5
IKD_DB	Database management system (CD)	1	
RF506UM	User's manual	1	

7. Structure and operation principle

7.1. Basic components of the device and their functions

Fig. 1 shows basic components of the device.

5

- (1) PDA.
- (2) Laser scanning module.
- (3) Charging device
- (4) Data cable

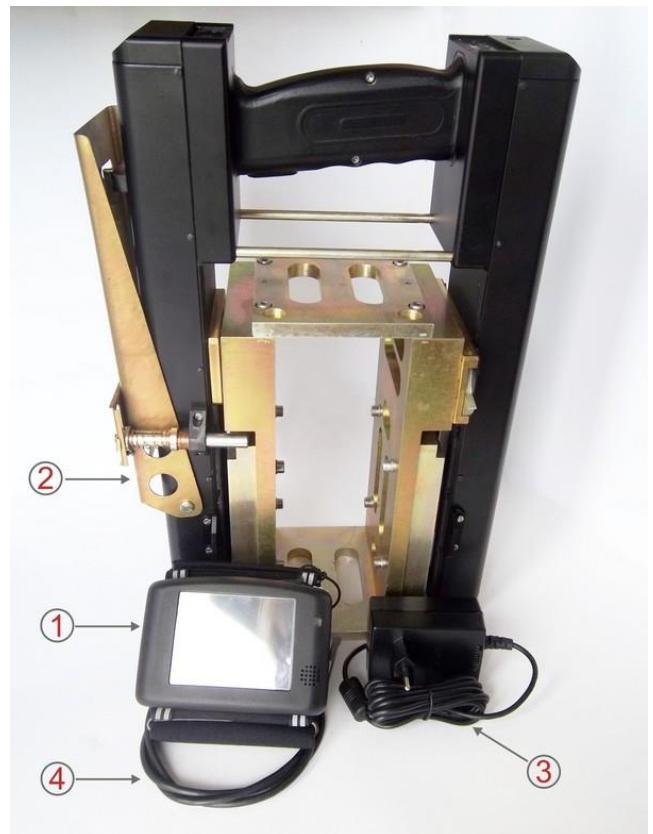


Figure 1

7.1.1. Laser scanning module

The module is intended for laser scanning of disc brakes surface.

Fig. 2 indicates:

- (1) Indicator of Bluetooth connection (blue LED)
- (2) Indicator of turn ON (red LED)
- (3) Turn ON button
- (4) Charging device connector
- (5) Charging indication, red/green LED
- (6) Magnetic support for mounting on the wheel side surface
- (7) Input window

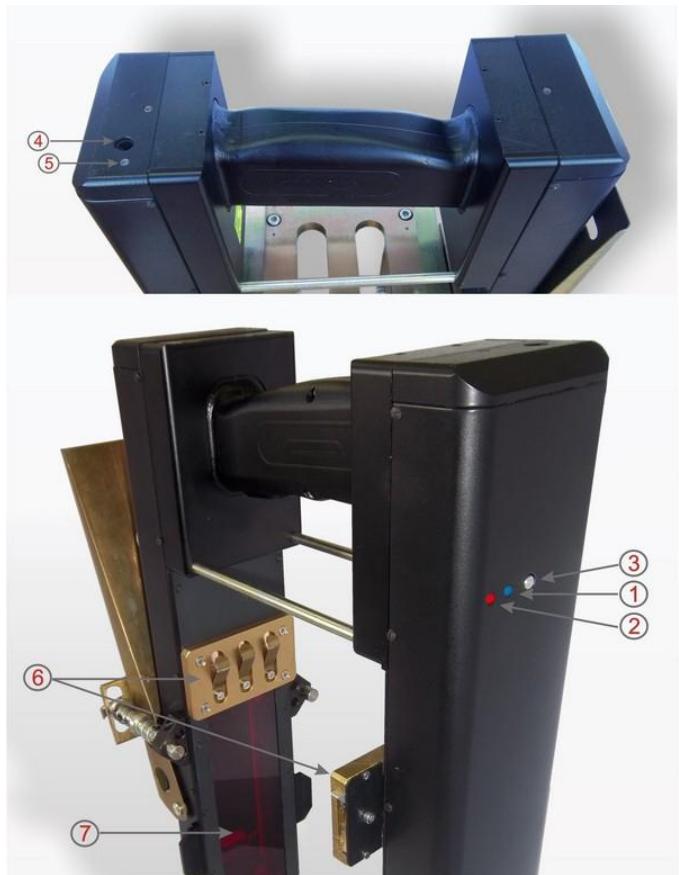


Figure 2

Overall dimensions of scanning module are shown in figure 3.

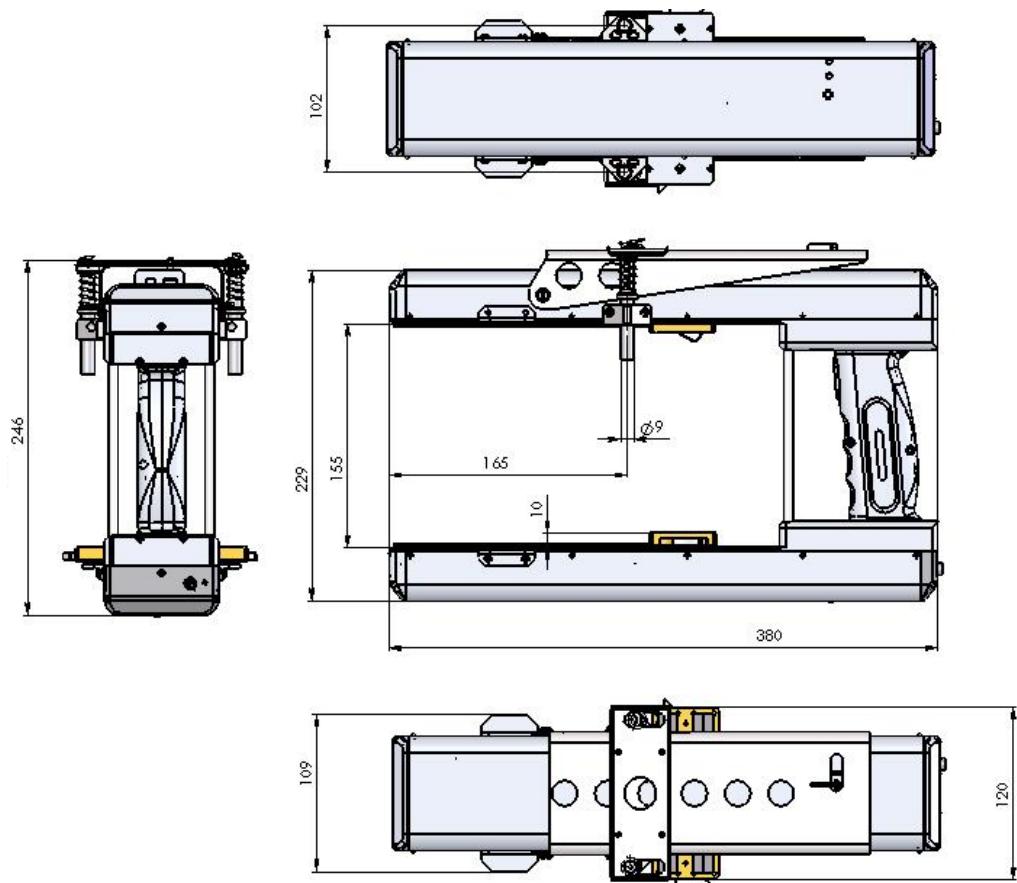


Figure 3

7.1.2. PDA

PDA is designed for control of the laser scanning module, data reception from the scanning module, indication of measurement results, parameter input and data storage.



Figure 4

Fig. 4 indicates:

- (1) Turn-on button
- (2) Charging indication, red/green LED
- (3) Charging device connector
- (4) Connector to PC USB-port or charging device
- (5) Flash memory card connector
- (6) Stylus
- (7) Bluetooth antenna
- (8) Battery case

Overall dimensions of PDA are shown in figure 5.

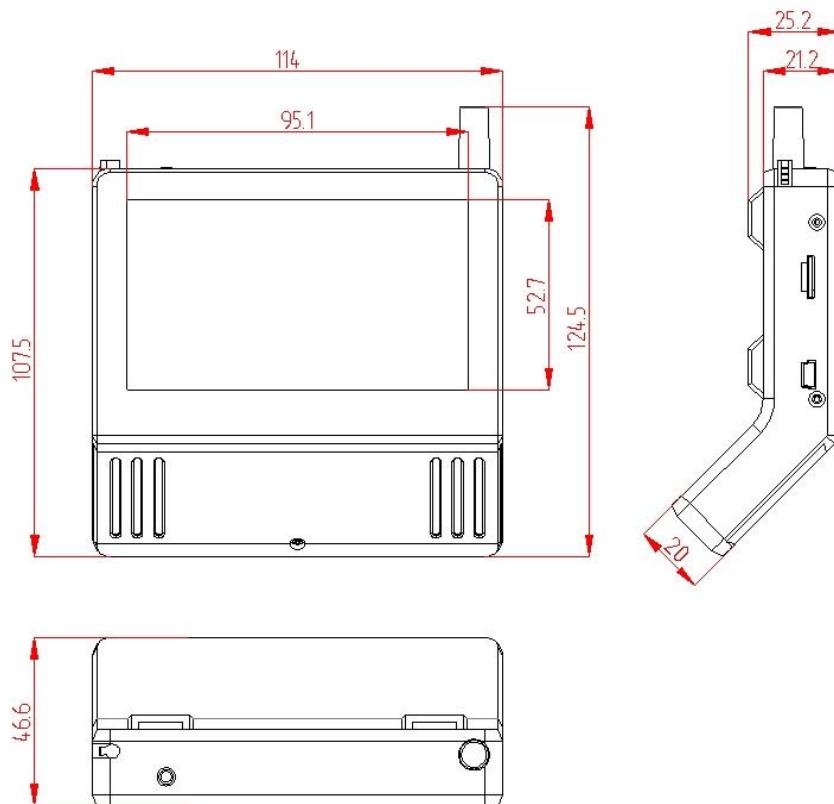


Figure 5

7.2. Operation principle

Operator mounts the laser scanning module onto the wheel. Having received a command from PDA or PC, the laser module performs non-contact scanning of the disc surface. Measurement results (geometric parameters and profile of the surface) are displayed on PDA, can be saved in the PDA memory, and transferred to the PC database. Simultaneously, additional parameters can be saved.

8. Measurement procedure

8.1. Activation

- Turn the PDA on by pressing the button (1), Fig. 4. Activation indication (2) will show a green LED lit.

- Switch the laser module on by pressing ON/OFF (5) button and holding it until red LED is lit
- After the laser module is switched on, some time will pass until automatic wireless communication is set between the profilometer and the PDA, which is accompanied by blinking of a blue LED (1) on the laser module. The LED goes out when the link is established.
- The PDA screen will show the main program window containing: main menu; indicators of PDA and laser module charging degree; indicator of Bluetooth connection showing serial number of the laser module with which connection is established; information panels of the selected working parameters and tolerances and the **Measurement** button:


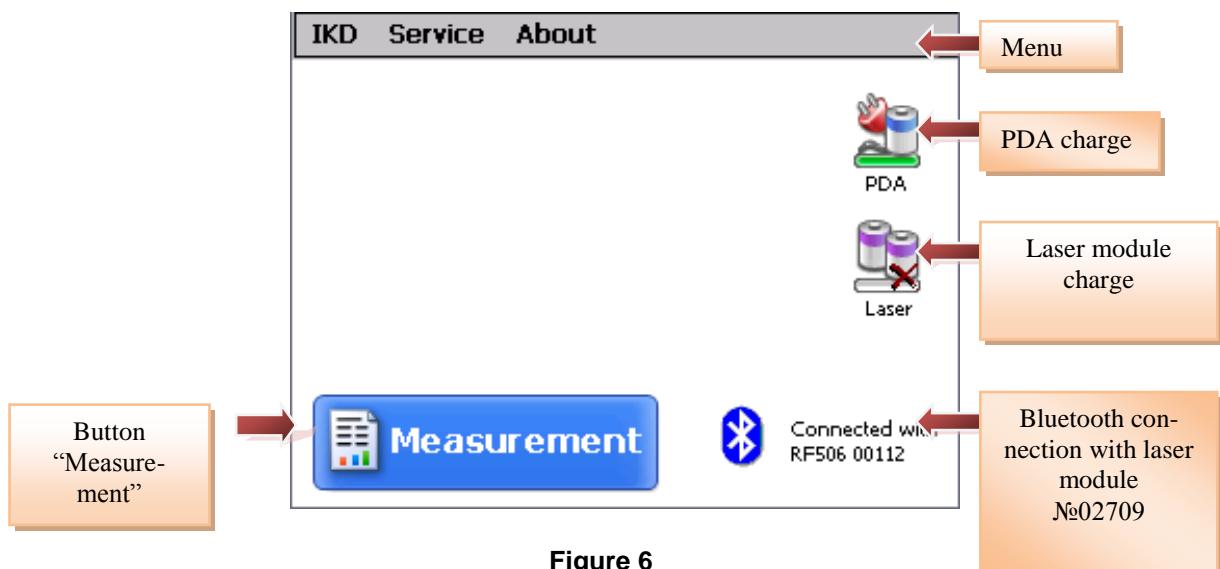


Figure 6


8.2. Measurement

To perform measurement, it is necessary to:

- Fix the laser module on the wheel;
- Press **Measurement** button on the PDA display;
- With the **Measurement** button pressed, the laser module will scan the disc brakes surface. During scanning time of about 5-6 seconds red LED (2) is lit.
- When scanning is completed, the PDA will show values of measured parameters selected for presentation (see par. [10.3.](#)).

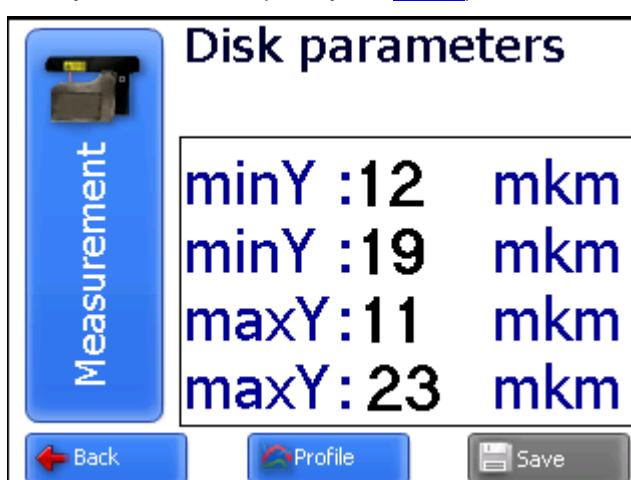

- To look at disc brakes profile, press the **Profile** button, and the scanned disk brakes profile will be displayed as well as measured parameters:

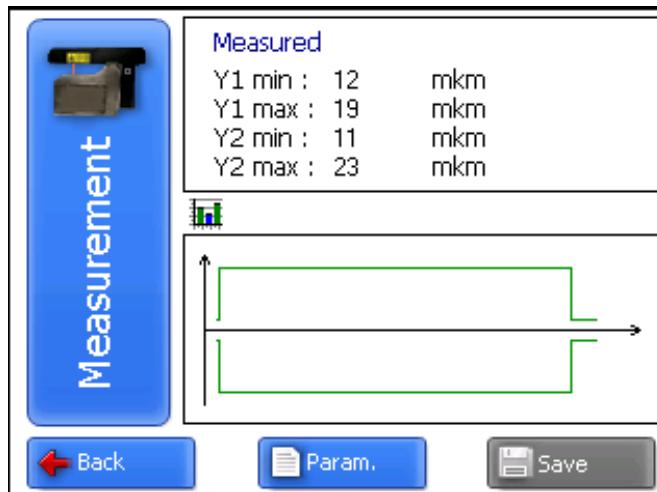

9

9. Wheel parameters under control. Terms and definitions

Geometric parameters of the disc are calculated automatically after laser scanning of the wheel is completed. To calculate geometric parameters, base points at the edges of brake disks and new disk parameters are used.

The parameters under control and respective calculation methods are given in Table 2.

Table 2.

Parameter	Designation	Calculation method
Maximum wear	Ymax	Maximum wear of brake disk
Minimum wear	Ymin	Minimum wear of brake disk

10. PDA program setting


Prior to starting work with the profilometer, PDA program setting must be performed.

10.1. Selection of measurement units

All parameters as well as measurement results can be presented in the metric system (millimeters) or in the English system of units (inches). To set measurement units, it is necessary to

- select **IKD> Units of measuring > [mm/inch]**

10

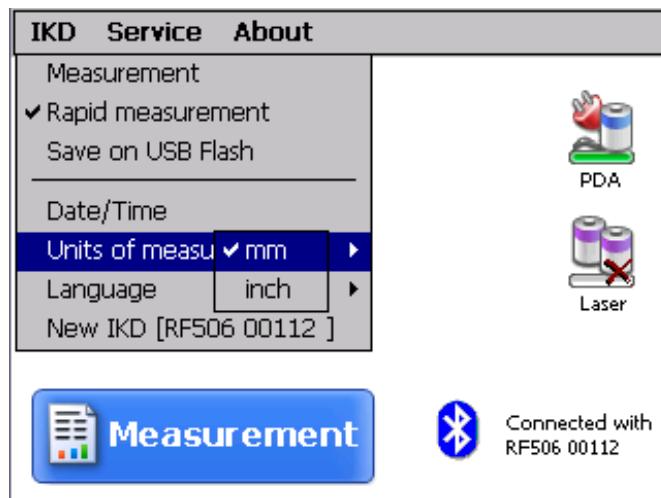


- select **mm** or **inch** options

10.2. Data and Time settings

To set data and time:

- select **Profilometer > Data/Time** in main window of the program. View on the PDA screen:

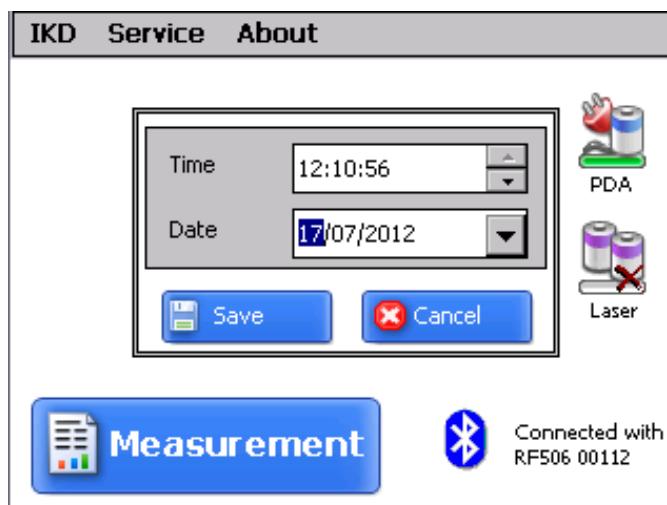


- write data and time
- press **Save**.

10.3. Database selection

If necessary, measurement results are saved in the PDA database. The program makes it possible to simultaneously create and store several database files connected with a concrete date of taking measurements. To select a database file, choose **Service > DB files** in the main window menu. The screen will show:

11

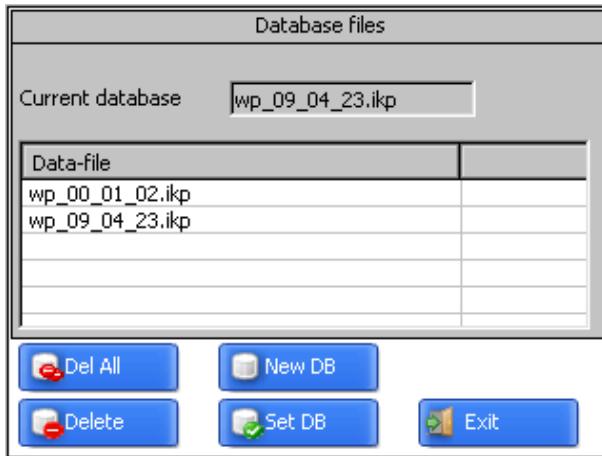


- To create a new database, press **New DB**. File with the name **wp_yy_mm_dd.ikp** will be formed automatically, where **yy_mm_dd** is the current date;
- to select the available database, activate the line with the file name and press **Select DB**;
- to delete the selected file press **Delete**;
- to delete all files press **Delete all**;
- to exit from the window press **Exit**.


10.4. New laser module connection

Bluetooth-connection of PDA is adjusted for work with the laser scanning module supplied with PDA complete package. To connect other scanning module it is necessary to:

- select **IKD > New IKD**

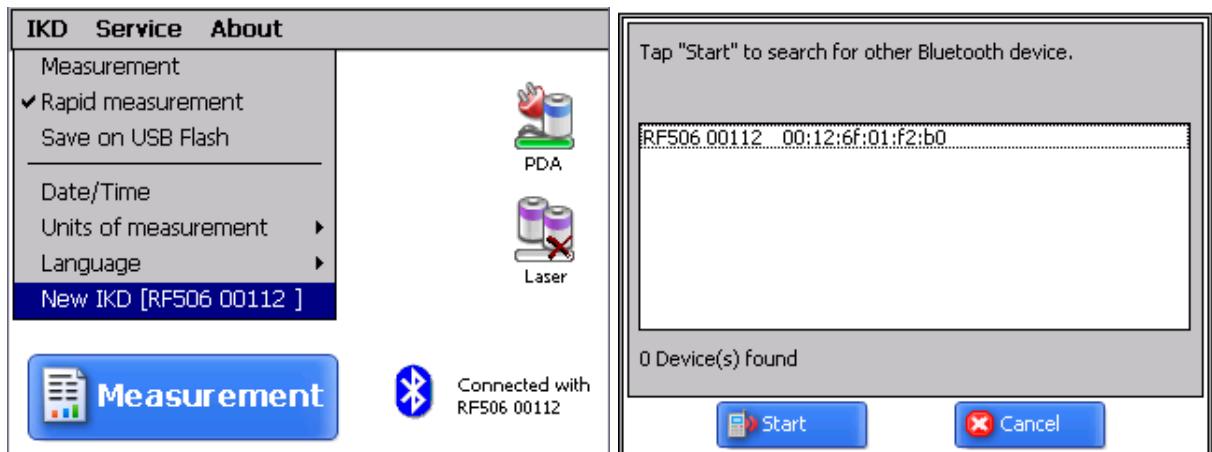

- press **Start** and wait for new devices (with serial numbers) will appear on the screen

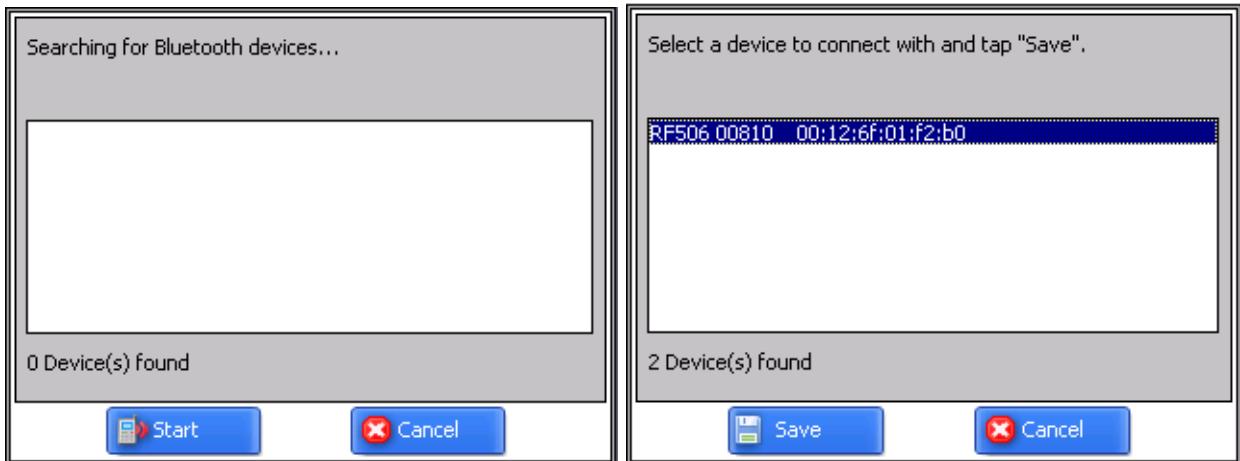

- select device and press **Save** to save new device address

10.5. Selection and changing of language and terminology

It is possible for the user to change the program language, form his own language support files as well as change/edit the terminology used.

To choose language in the main window menu, select **IKD > Language**. Select the required language support file.

10.6. Browsing and updating PDA software

To look at the software version in the main window menu, select **About Program** tab. The screen will show:



11. Working with the profilometer

11.1. Activation

Switch on the PDA and scanning module as shown in par. [8.1.](#)

11.2. On-line measurements


Procedure of on-line measurements is described in par. [8.2.](#)

11.3. Measurements with database maintenance

A fully functional work with the profilometer involves maintenance of the measurements database.

To take measurements:

- Select in the main menu **IKD > Measurement**, the window of parameters input will appear

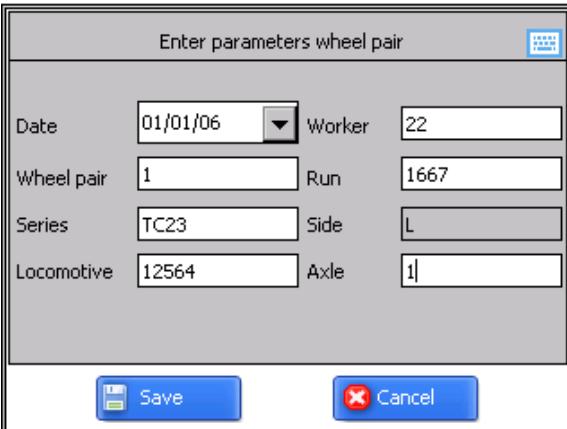


Enter parameters wheel pair			
Date	01/01/06	Worker	22
Wheel pair	1	Run	1667
Series	TC23	Side	L
Locomotive	12564	Axle	1

Save **Cancel**

- If necessary, fill in/edit the required fields
- to save parameters, press the **Save** button
- to measure disc brakes;
- after the wheel surface is laser-scanned, the PDA will show the value of selected geometrical parameters.



- to look at the profile press **Profile** button:

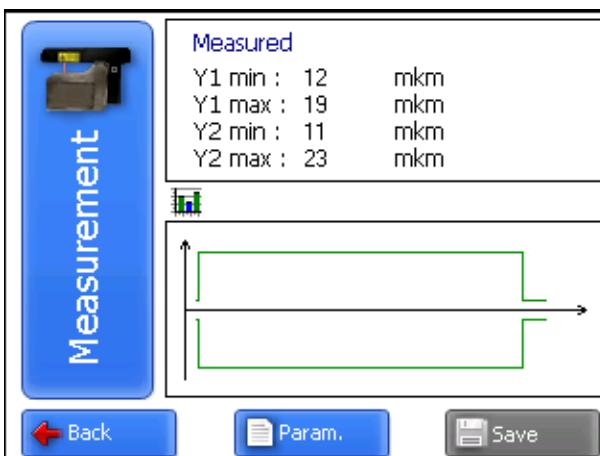


- when a satisfactory result is obtained, press **Save** on the display to save it

11.4. Browsing the database

To browse the database:

- select **Service > Profiles** in the main window. View on the screen:

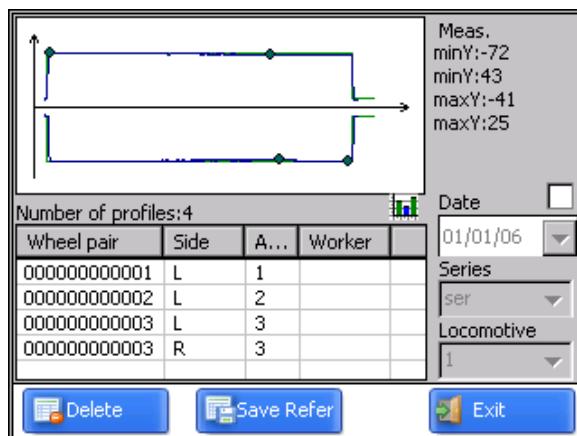

Buttons:



– delete selected profile;

- when in this mode, it is possible to save the selected profile as a reference profile by pressing Save button:



– create reference profile (**profile_name.ref**).




- write profile name and press **Save**

11.5. Saving database on flash memory card

One of the ways to transfer database from PDA to PC is to use flash memory card. To save database on the card, proceed as follows:

- connect cable **RF505.42** to the PDA universal connector
- insert flash card to the respective cable connector
- select **IKD > Save to USB flash** in the main program window

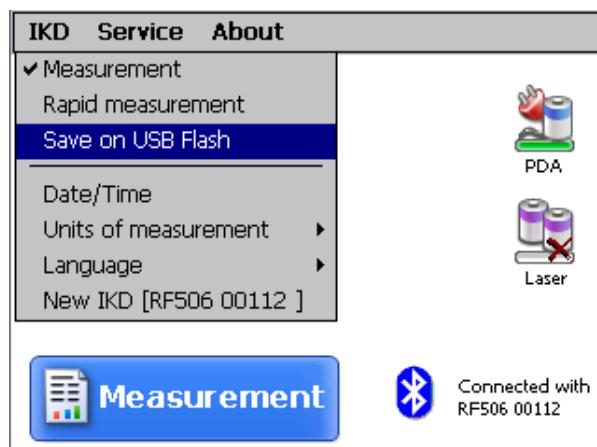

- if saving is successful, the screen will show **Data saved on USB Flash**
- remove flash card from the cable.

11.6. Deactivation

To turn off the PDA, press power supply button and hold it down until the screen is blank. To turn off the laser module, press button 3, Fig. 2 and hold it down until red LED 2 goes out.

12. Database support software


The **PRP_DB** software is intended for maintaining wheel sets wear database on a personal computer.

To install the software, insert compact disk to PC CD drive, select and start **Install_PRP.exe**. file in the **Software** folder. Follow instructions of the installation wizard. The program is installed in **C:\Program Files\RIFTEK** folder by default.

13. Installation of Bluetooth connection between scanning module and PC

To install Bluetooth-connection between the laser scanning module and PC, it is necessary to:

- insert USB/Bluetooth-module to PC USB-port..
- continue installation of the equipment following instructions of the wizard by selecting successively:

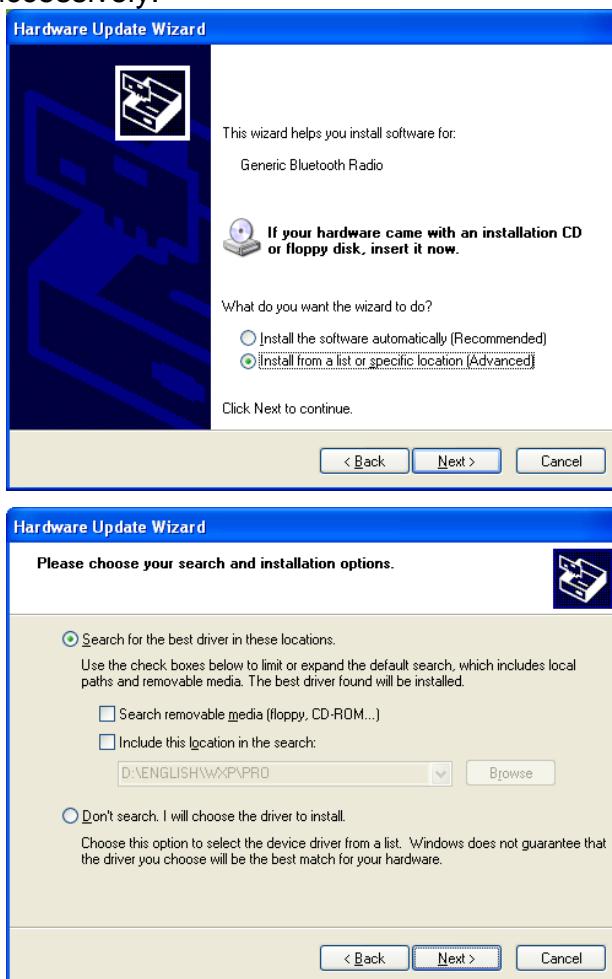

- when drivers are installed, the corresponding message and Bluetooth icon will appear in the screen:



- activate **IKD**.
- click right mouse key on the Bluetooth icon and select **Add Bluetooth device**




- Then Bluetooth installation wizard will start working:



- tick the **Device is installed and ready for connection**
- select **Further** for search
- when the search is completed, the wizard will show the devices found:



- select the required device, press **Further** and type access key (Pin). The key for each device consists of 4 symbols and is set based on the profilometer serial number. For example, if the profilometer number is 00810, then Pin=0080; 01309 - Pin=0139, etc.

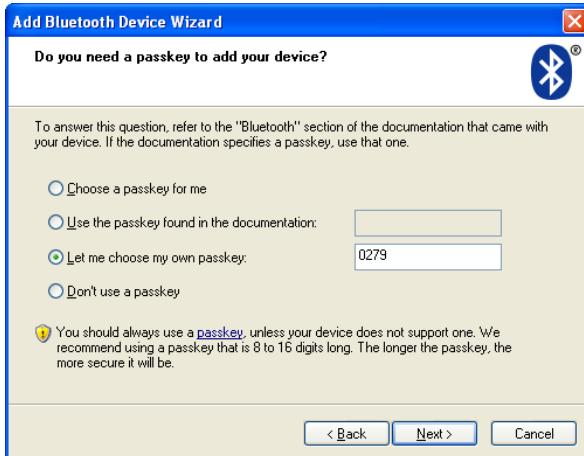

- press **Further** and continue installation process.
- when required drivers are installed, the Bluetooth device will give a message with COM-port (outgoing) which should be opened for connection with profilometer during calibration or for controlling profilometer by PC. In this case, the port is **COM20**:




14. Testing and calibration

We can supply the profilometer complete with an RF432.10 (Figure 1A) calibration-brake-disc simulation unit and **F506Calibr** calibration program that are designed for periodic testing and self-calibration of the profilometer in case of unsatisfactory testing results

14.1. Preparation for testing/calibration


- install the **RF506Calibr** program.
- install Bluetooth-connection between the scanning module and PC as described in par. [13](#)
- adjust the profilometer to the calibration-wheel simulation unit - Fig.1
- run **RF506Calibr** program

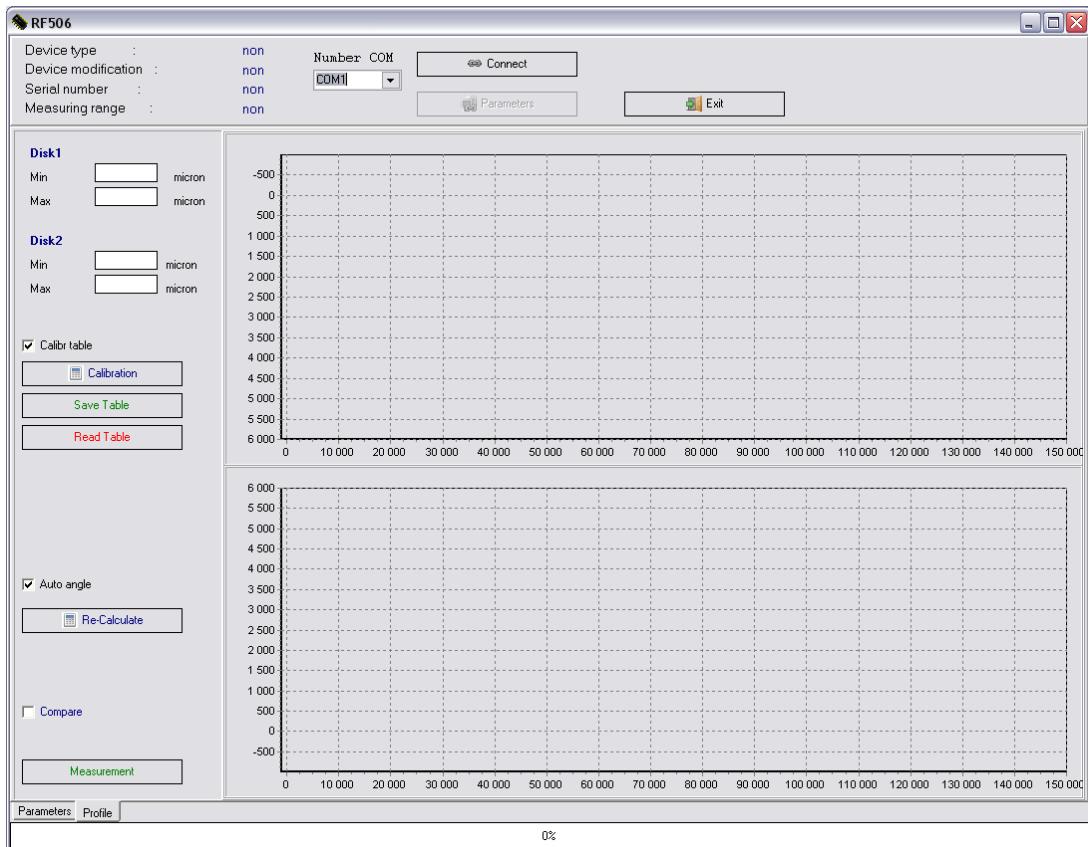

- select the required port



- press “Parameters” button to connection

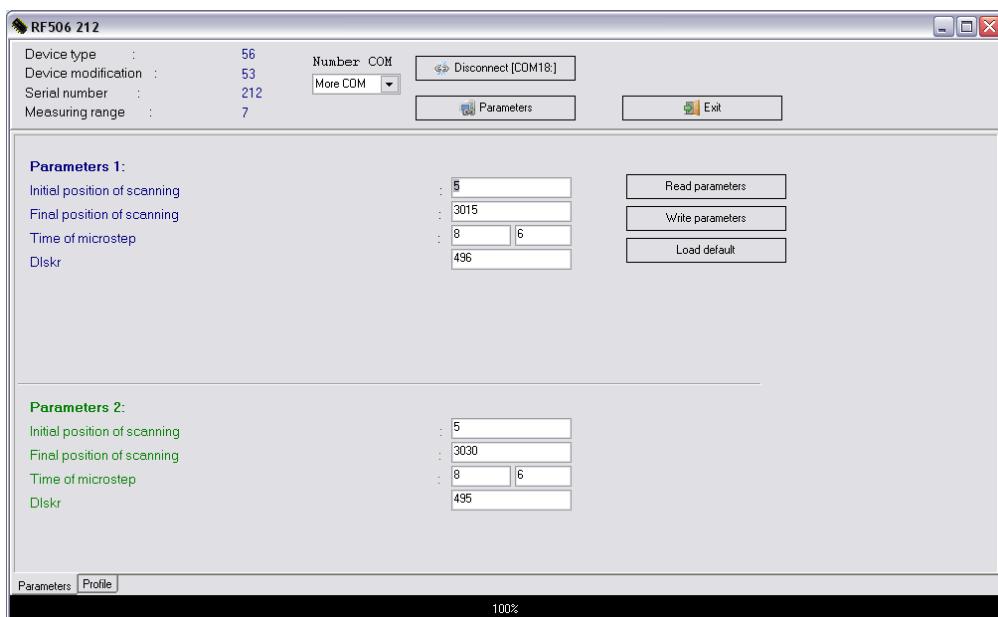

- to measure the profile press **Measure** button. The display will show measured profiles after measurement has been taken



- to compare with the reference profile, tick the **Compare** checkbox.



- The deviation of measurements from the ethalon will be automatically calculated:

Disk1		
Min	-43	micron
Max	5	micron
Disk2		
Min	-4	micron
Max	49	micron

14.2. Calibration

For calibration:

Fulfill pointy [.14.1](#)

Press **Calibration** -  **Calibration**. After scanning the program forms calibration table and Save Table button begins available **Save table** -  **Save Table**.

To save the table press **Save table**.

Please wait the end the table downloads into the memory. It takes sufficiently large time. Don't make any manipulations with profilometer during this time.

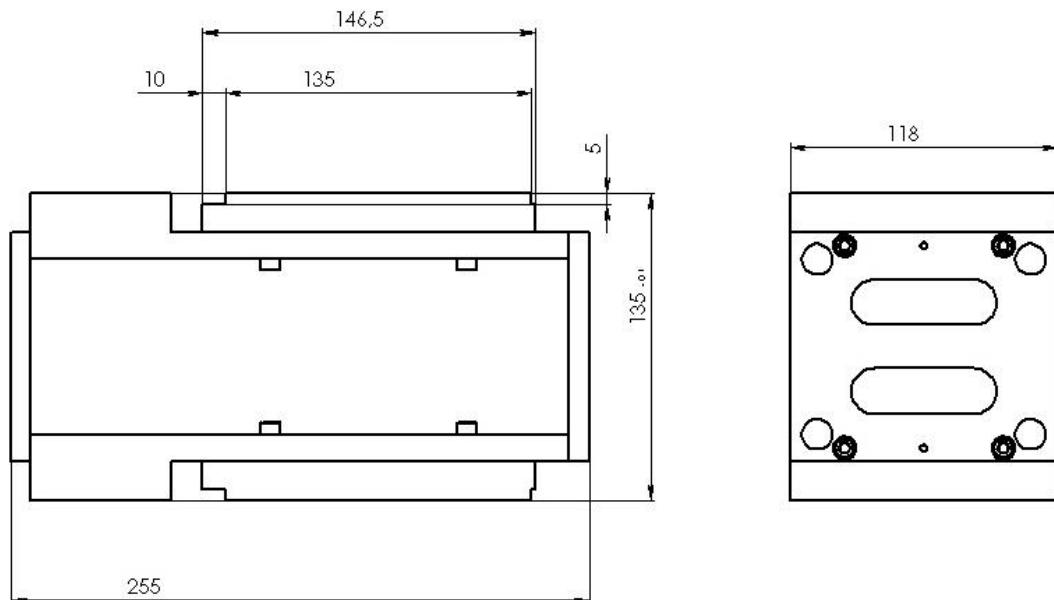


Figure 1A

15. Charging of built-in accumulator battery

- Switch off PDA (laser module).
- Connect charging device and PDA (laser module)
- Connect charging device and 220V.
- Time of charging of DRD-5 hours (until red LED is OFF), laser module – 4 hours (until green LED is lit).
- Disconnect charging device and 220V
- Disconnect charging device and PDA (laser module)

ATTENTION: please follow the sequence of this points.

16. Warranty policy

Warranty assurance for the laser profilometer IKD - 24 months from the date of putting in operation; warranty shelf-life - 12 months.

17. Distributors

AUSTRALIA Applied Measurement Australia Pty Ltd RAILWAY INSTRUMENTS ONLY Suite 1, 8 French Ave, Bankstown, NSW 2200, Australia Tel: +61 (0) 297082000 Fax: +61 (0) 297084444 sales@appliedmeasurement.com.au www.appliedmeasurement.com.au	AUSTRALIA XN Innovation LG Centre, Suite 1, Level M, 55 Parramatta Rd, NSW, 2141, Lidcombe, Australia Tel: +61 (0)2 8091 2426 Fax: +61 (0)2 9648 6597 xni.sales@gmail.com	BENELUX Altheris B.V. Scheveningseweg 15 2517 KS The Hague, The Netherlands Tel: +31 (70) 3924421 Fax: +31 (70) 3644249 sales@altheris.nl www.altheris.com
BULGARIA, HUNGARY RMT Ltd. R Zahradni 224 739 21 Paskov, Czech Republic Tel: +420 558640211 Fax: +420 558640218 rmt@rmt.cz www.rmt.cz	BRAZIL CAPI Controle Av. Paschoal Ardito, 1880 Americana-SP, Brazil Tel: +55 19 36047068 Fax: +55 19 34681791 capi@capicontrole.com.br www.capicontrole.com.br	CHINA Zhenshangyou Technologies Co.,Ltd. Rm 1806, Block B, Jinhaiyan Building Chuangye Road, Nanshan District Shenzhen, 518054, China Tel: +86 755-26528100/8011/8012 Fax: +86 755-26528210/26435640 info@51sensors.com www.51sensors.com
CHINA Shanghai micron-metrology com., Ltd. Room 602 unit 4, lane 399, Mudan road, Pudong New district Shanghai, China Tel: +86-21-68416510 sales@micron-metrology.cn www.micron-metrology.cn	CHINA JRKtech Co., Ltd. 1F, Building 9, 100 Xianlie Rd., Guangzhou, China Tel: +86-20-87684601 Fax: +86-20-87582371 shengz_k@163.com www.jrktech.com	CZECH REPUBLIC RMT Ltd. Zahradni 224 739 21 Paskov, Czech Republic Tel: +420 558640211 Fax: +420 558640218 rmt@rmt.cz lubomir.kolar@rmt.cz www.rmt.cz
FINLAND TERÄSPYÖRÄ-STEELWHEEL OY RAILWAY INSTRUMENTS ONLY Juvan teollisuuskatu 28 FI-02920 ESPOO, Finland Tel: +358 400 422 900 Fax: +358 9 2511 5510 steelwheel@steelwheel.fi www.teraspypora.fi	FRANCE DB Innovation (ALTHERIS France) 26, avenue de la Mediterranee 34110 Frontignan France Tel: +33-(0)467786166 Fax: +33-(0)467740134 dbi@altheris.fr www.altheris.fr	GERMANY Disynet GmbH Westwall 12 D-41379 Brueggen, Germany Tel: +49 (2157) 8799-0 Fax: +49 (2157) 8799-22 disynet@sensoren.de www.sensoren.de
GERMANY BIP-Industrietechnik GmbH RAILWAY INSTRUMENTS ONLY Am Elisabethhof 22, D-14772 Brandenburg D-41379 Brueggen, Germany Tel: +49 (0) 33 81 75 90 0 Fax: +49 (0) 33 81 75 90 11 info@bip-industrie.de www.bip-industrietechnik.de	GERMANY Finger GmbH & Co. KG OPTICAL MICROMETERS ONLY Sapelloh 172, 31606 Wärmsen, Germany Tel: +49 5767 96020 Fax: +49 5767 93004 finger@finger-kg.de www.finger-kg.de	GERMANY Hylewicz CNC-Technik SHTRIKH-2 ONLY Siemensstrasse 13-15, 47608 Geldern, Germany Tel: +49 2831 91021-20 Fax: +49 2831 91021-99 info@cnc-step.de www.cnc-step.de

INDIA Pragathi Solutions #698, 5th Main, 8th Cross, HAL 3rd Stage, New Tippasandra Road, Bangalore, 560075, India Tel: +91 80 32973388 Tel/fax: +91 80 25293985 Mobile: +91 9448030426/ +919448492380 sales@pragathisolutions.in arghya@pragathisolutions.in www.pragathisolutions.in	INDONESIA PT. DHAYA BASWARA SANI-YASA Sentra Niaga Puri Indah Blok T6 No. 41 Kembangan Jakarta, 11610, Indonesia Tel: 021 5830 4517 Fax: 021 5830 4518 management@ptdbs.co.id	ISRAEL Nisso Dekalo Import Export LTD 1 David Hamelech Street Herzlia 46661 Israel Tel: +972-99577888 Fax: +972-99568860 eli@fly-supply.net www.fly-supply.net www.aircraft-partsupply.com
ITALY FAE s.r.l. Via Tertulliano, 41 20137 Milano, Italy Tel: +39-02-55187133 Fax: +39-02-55187399 fae@fae.it www.fae.it	LATVIA, ESTONIA SIA "SOLARTEX" RAILWAY INSTRUMENTS ONLY Duntes 15a, 5th floor, office B7 Riga, Latvia Tel.: +371 67 130 787 solartex@inbox.lv	MALAYSIA OptoCom Equiptech (M) Sdn Bhd H-49-2, Jalan 5, Cosmoplex Industrial Park. Bandar Baru Salak Tinggi, Sepang, Malaysia Tel: 603 8706 6806 Fax: 603 8706 6809 optocom@tm.net.my www.optocom.com.my
POLAND P.U.T. GRAW Sp. z o.o. ul. Karola Miarki 12, skr.6. 44-100 Gliwice, Poland Tel/fax: +48 (32) 231 70 91 info@graw.com www.graw.com	POLAND MTL ASCO Sp. z o.o. RAILWAY INSTRUMENTS ONLY ul. Wielowiejska 53 44-120 PYSKOWICE (k/ GLIWIC), Poland Tel: +48 32 233 33 33 Fax: +48 32 233 21 34 serwis@mtlasco.pl www.ascorail.pl	POLAND RMT Ltd. Zahradni 224 739 21 Paskov, Czech Republic Tel: +420 558640211 Fax: +420 558640218 rmt@rmt.cz lubomir.kolar@rmt.cz www.rmt.cz
PORTUGAL UltraSens Qt. da Portela, Lt. 22.1, Ap. 152 3030 - 502 Coimbra, Portugal Phone +351 239 796 277 Fax: +351 239 918 267 info@ultrasens.com www.ultrasens.com	RUSSIA Sensorika-M LLC Dmitrovskoye shosse 64-4 127474, Moscow, Russia Tel: +7 499 487 0363 Fax: +7 499 487 7460 info@sensorka.com www.sensorka.com	RUSSIA Diesel-test-Komplekt LLC 620030, Karjernaya St, 16 Ekaterinburg, Russia Tel/fax: +7 343 2227565 Tel/fax: +7 343 2227370 mail@d-test.ru www.d-test.ru
SERBIA, SLOVAKIA RMT Ltd. Zahradni 224 739 21 Paskov, Czech Republic Tel: +420 558640211 Fax: +420 558640218 rmt@rmt.cz lubomir.kolar@rmt.cz www.rmt.cz	SOUTH KOREA PROSEN. CO., LTD 211/ Jung-woo Venture 2, 341 Sansallo, Danwon-gu, Ansan-si, Gyeonggi-do, 425839 Republic of Korea Tel: +82-(0)31-508-3456~7 Fax: +82-(0)31-624-3458 prosensor@naver.com www.prosen.kr	SOUTH KOREA DAESHIN T&S CO., LTD 1702 Ace High-End Tower 5 Gasan-dong, Geumcheon-Gu Seoul, Korea Tel: +82-2-2279-8800 Fax: +82-2-2277-6667 railstar1983@korea.com www.railstar.co.kr
SPAIN Iberfluid Instruments S.A. Cardenal Reig, 12 08028 Barcelona, Spain Tel: +34 93 447 10 65 Fax: +34 93 334 05 24 myct@iberfluid.com www.iberfluid.com	SWEDEN, NORWAY, DENMARK BLConsult Rävbergsvägen 31 SE 713 30, Nora, Sweden Tel: +46 (0) 587 153 20 Mobile: +46 (0) 70 663 19 25 info@blconsult.se www.blconsult.se	UKRAINE KODA Frunze st 22 61002, Harkov, Ukraine Tel/fax: +38 057 714 26 54 mail@koda.com.ua www.koda.com.ua

UNITED KINGDOM, IRELAND	USA, CANADA, MEXICO International Electronic Machines Corporation RAILWAY INSTRUMENTS ONLY	USA, CANADA, MEXICO Acuity Products of Schmitt Industries, Inc.
Ixthus Instrumentation Ltd The Stables, Williams' Barns Tiffield road, Towcester, Northants Tel: 01327 353437 Fax: 01327 353564 www.ixthus.co.uk info@ixthus.co.uk	R 60 Fourth Avenue, Albany, New York, USA Tel: +1 518 449-5504 Fax: +1 518 449-5567 railway_marketing@iem.net wwwием.net	2765 NW Nicolai Street Portland, OR, 97210, USA Tel: +1-503 227 7908 Fax: +1 503 223 1258 sales@acuitylaser.com www.acuitylaser.com

23

18. Annex 1. RIFTEK measurement instrument for railway transport

Laser wheel profilometer. IKP Series

A laser profilometer is designed for the measuring of:

- wheel flange height;
- wheel flange thickness;
- wheel flange slope;
- full profile scanning and analyze of wheel rolling surface;
- maintaining of electronic wear data base;
- control of tolerances and sorting in the course of checkup, examination, repair and formation of railway wheel sets;

Measurements are made directly on rolling stock without wheel set roll-out;



Back-to-back distance measuring gauge. IMR Series

The device is designed for:

- measuring back-to-back distance of railway, metro and tram wheels in the course of checkup, examination, repair and formation of wheel sets;

Measurements are made directly on rolling stock without wheel set roll-out



Portable laser rail profilometer. PRP Series

The main functions of PRP are:

- obtaining the information on the cross-section profile of the working railhead surface;
- full profile scanning and analyze of the railhead acting face;
- visualization of the combined graphical images of actual and new cross-section railhead profiles on the display of system unit;



**Wheel diameter measuring gauge. IDK Series**

Electronic gauge is designed for measuring wheel rolling circle diameter of railway, metro and tram wheel sets.

Measurements are made directly on rolling stock without wheel set roll-out.