

www.lumentum.com Data Sheet

The ST Series fiber-coupled diode pump module offers up to 140 W output through a 106.5  $\mu$ m fiber. It uses a high-power proprietary chip optimized for reliability at high peak power. The ST Series leverages a long history of fiber-coupled packages such as the L4, incorporating a highly-reliable design in a scalable commercial product.

The multimode pump module offers high brightness, small size, and simplified thermal management. Similar to the Lumentum L4 package, the diodes operate independently as distributed heat sources, allowing air- or water-cooled architectures with predictable high reliability.

The ST Series is a unique solution for the fiber-coupled pumplaser market, offering powerful technical attributes in a costeffective package.

#### **Key Features**


- 140 W output power into 106.5 µm aperture
- High reliability
- 1060 nm feedback protection
- 0.22 numerical aperture (NA) fiber
- Isolated electrical contacts

#### **Applications**

- Fiber laser pumping
- Material processing
- Graphic arts

## **Dimensions Diagram**

(Specifications in mm unless otherwise noted.)

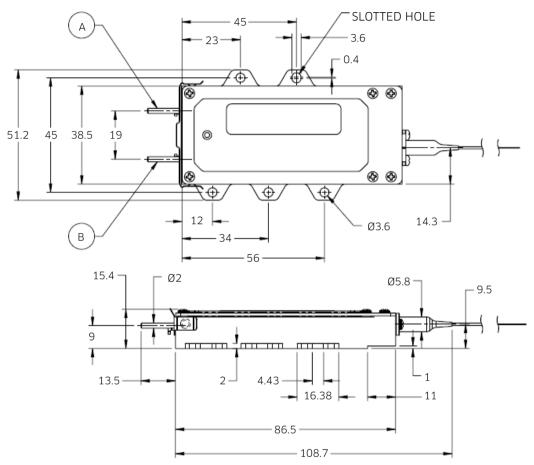

# Pinout

Pin	Description
A	Laser cathode (-)
В	Laser anode (+)

## Specifications<sup>1</sup>

Parameter	Symbol	Minimum	Typical	Maximum
Laser Characteristics at 140 W Output Power				
Maximum operating current set point (BOL)	I <sub>op</sub> , BOL	_		13.0 A
Maximum operating voltage at I = 13 A (BOL)	V <sub>op</sub> , max	_		25.0 V
Electrical-to-optical conversion efficiency at I <sub>op</sub> , BOL set point	PCE (140 W) PCE (120 W)	42% 36%	48% 41%	_
Wavelength range at I <sub>op</sub> (98% of power within band)	λ	908 nm 928 nm	_	928 nm 950 nm
Wavelength shift with temperature		_	0.3 nm/°C	
Back reflection isolation 1060-1100nm		30 dB		
Light within 0.15 NA		_	95%	
Fiber Characteristics				
Fiber core diameter (Nufern P/N FUD-4130)	dc	105 μm	106.5 μm	108 μm
Fiber numerical aperture	NA	0.20	0.22	0.24
Fiber cladding diameter	dcı	124 μm	125 μm	126 μm
Fiber buffer diameter	dь	230 μm	245 μm	260 μm
Fiber loose tubing diameter	dj	0.75 mm		1.05 mm
Total fiber length	Lf	1.2 m		2.0 m
Fiber loose tubing length	Lt	0.7 m		0.9 m
Fiber bend radius		30 mm	_	_
Fiber termination		_	None	_
Fiber axial pull force, 15 sec		_	_	5 N
Fiber side pull force, 15 sec		_		2.5 N

<sup>1.</sup> All electrical and optical performance data referenced at 35°C (case temperature) and lop beginning of life (BOL), unless specified.

cold plate typically needs to be chilled to 25°C-30°C to maintain 35°C pump case temperature.

## **Environmental Requirements**

Parameter	Minimum	Maximum	Notes
Case operating temperature (base of laser housing)	10°C	50°C	Mounting feet can be used to approximate base temperature.
Storage and transportation temperature (non-operating)	-30°C	75°C	Non-condensing under operation and storage.
Electrostatic discharge (ESD)	_	500 V	НВМ
Maximum voltage between any pin and package	_	75 V	
RoHS 6/6			Compliant

#### **Ordering Information**

For more information on this or other products and their availability, please contact your local Lumentum account manager or Lumentum directly at customer.service@lumentum.com.

Sample: 22015032

Part Number	Power	Wavelength
22015032	140 W	908 nm - 928 nm
22022513	140 W	928 nm - 950 nm
22026256	120 W	908 nm - 928 nm
22026255	120 W	928 nm - 950 nm

#### **Operating Considerations**

Operating the diode laser outside at maximum ratings may cause device failure or a safety hazard. Power supplies used with the component must be employed so that the maximum peak optical power cannot be exceeded. CW diode lasers may be damaged by excessive drive current or switching transients. When power supplies are used, the diode laser should be connected with the main power on and the output voltage at zero. The current should be increased slowly while the diode laser output power and the drive current are monitored.

Device degradation accelerates with increased temperature, and thus the case temperature should be minimized and the unit operated in a non-condensing atmosphere.

A proper heatsink for the diode laser on a thermal radiator will greatly enhance laser life. Refer to the product application note for more information regarding heat sinking and mounting the product.

## Electrostatic Discharge (ESD) Protection

ESD is the primary cause of unexpected diode-laser failure. Take extreme precaution to prevent ESD. Use wrist straps, grounded work surfaces, and rigorous antistatic techniques when handling diode lasers.

### Laser Safety



Note: This component requires provisions of drive and control electronics before emitting laser radiation.

Laser classification depends on the system control circuit and laser safety features provided.

This diode-pumped laser module is not 21CFR 1040.10 or IEC 60825-1:2014 certified. It is a component intended for system integration. Compliance with 21CFR 1040.10 and/or IEC 60825-1:2014 will need to be determined at the system level.

Lumentum has registered this laser with the FDA/CDRH as an OEM component. Please contact Lumentum for an FDA/CDRH accession number for this laser component.

#### Serial Number Identification Label



ST-915B

10/16/2018 MADE IN THAILAND





North America Toll Free: 844 810 LITE (5483)

Outside North America Toll Free: 800 000 LITE (5483)

Toll Free: 400 120 LITE (5483)

© 2021 Lumentum Operations LLC Product specifications and descriptions in this document are subject to change without notice.

stdiodelaserpump-ds-cl-ae 30173440 904 1121